

# Measurement Guide: Trapped Mount



Discover Retractable Systems offered by MaestroShield

Retractable Systems Made in  
the USA  
We Provide Retractable  
Screens and Storm & Security  
Systems




Retractable Screens



# MaestroShield Measurement Guide

## Retractable Screen Trapped Mount

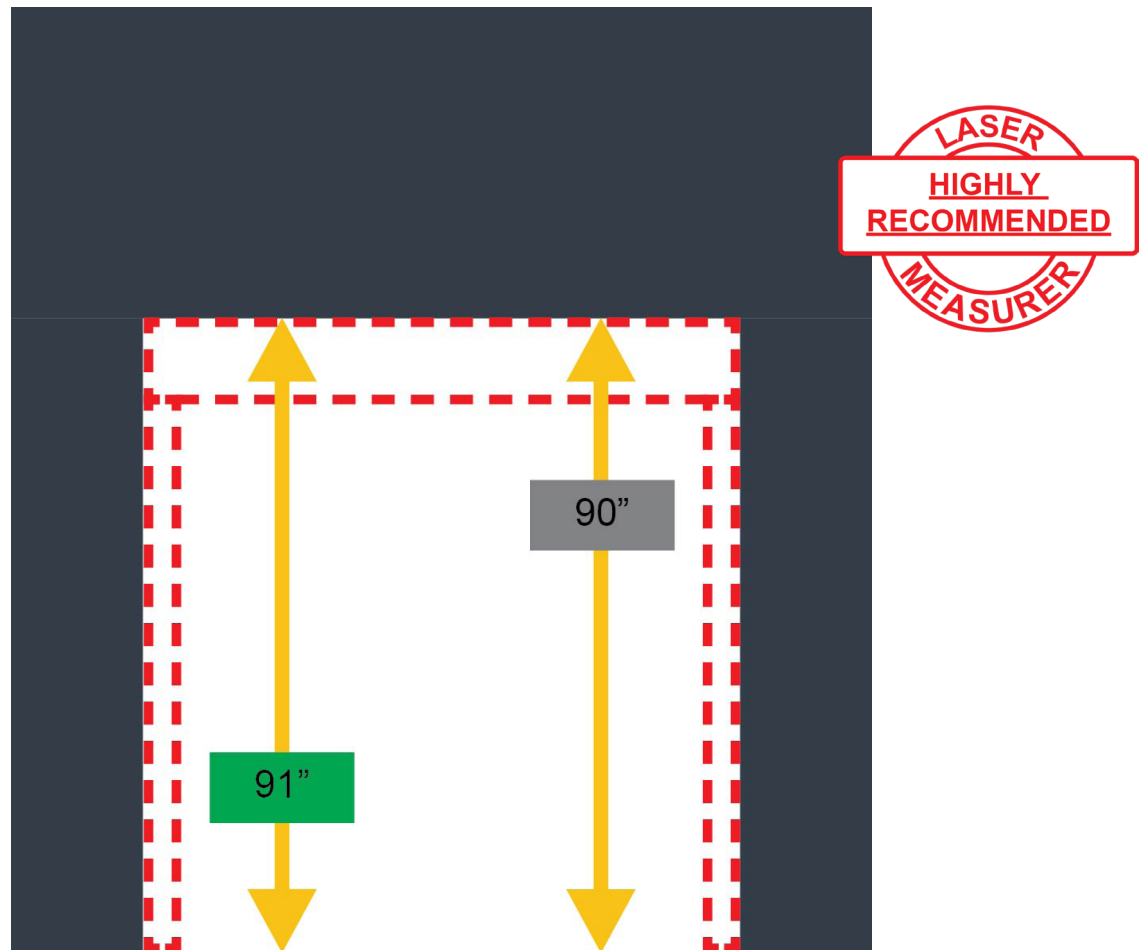

### Measuring Finished Height:


1. To measure the height of the opening, take one measurement from the base of the opening to the ceiling on the left side and another measurement from the base of the opening to the ceiling on the right side.
2. Use the measurement with the greater number for your height.

Example: If you measure an opening on the left side at 91" and measure on the right side at 90", your Finished Height will be 91".

- 2a. **(Optional): Add 1 inch to your height measurement and cut the material on site. Cutting the tracks on site ensures a perfect fit for specific openings. For example, instead of using 91" as your Finished Height, input 92" and cut accordingly when the system arrives.**

# MaestroShield Measurement Guide

## Retractable Screen Trapped Mount

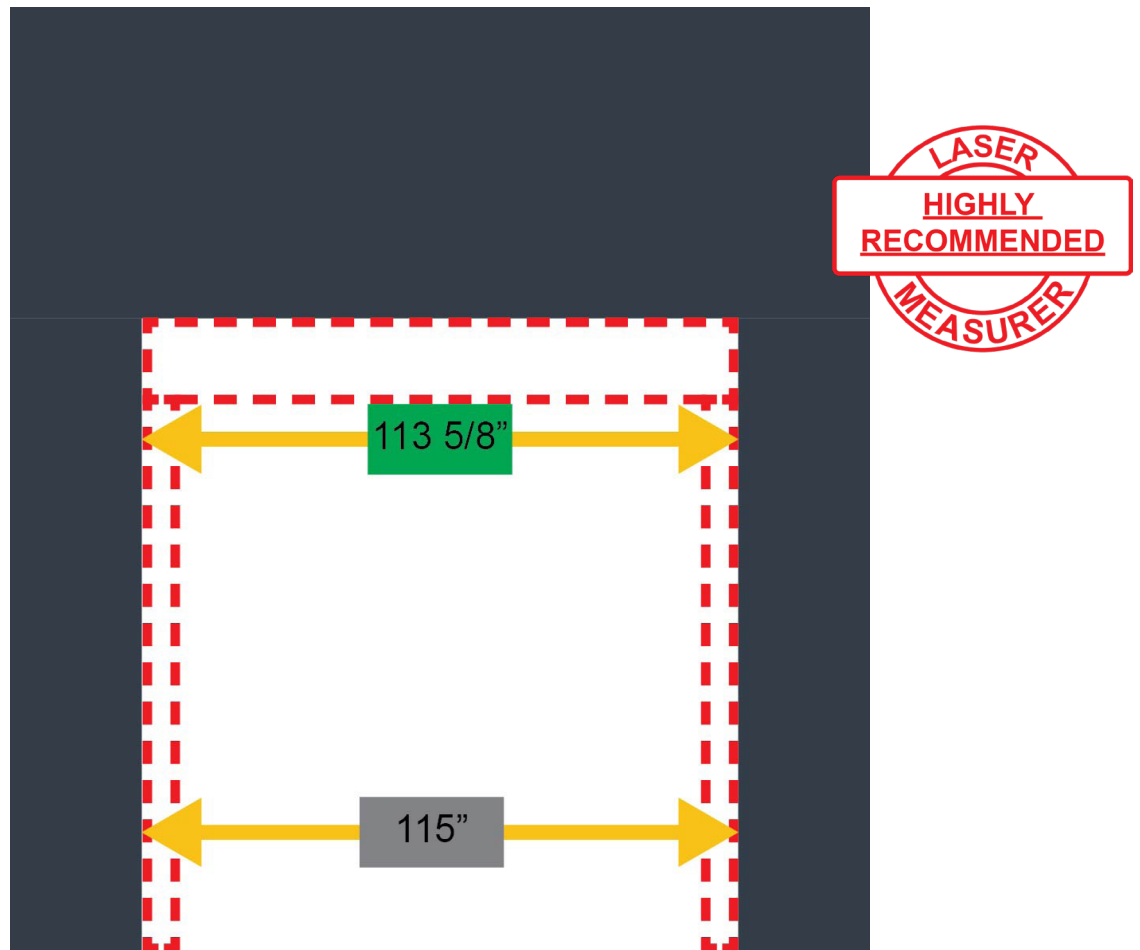

### Measuring Finished Width:

1. Start by measuring the width of the opening. Take one measurement from the bottom of the opening and one measurement from the top of the opening.
2. Use the measurement with the smallest number for your width.

Example: If you measure an opening at the bottom and get 115" as your measurement, then measure the top and get a measurement of 113 5/8", you will use 113 5/8" as your measurement for width.

- 2a. **IF the difference between width measurements is 0.5" or greater, select Receiving Channel in TOM and deduct 1/4" from the Finished Width measurement.**